

QT-Brightek PLCC Series PLCC2 LED

Part No.: QBLP670 Series

Product: QBLP670_series	Date: March 09, 2015	Page 1 of 12
	Version# 3.3	



Tablet of Contents:	
Introduction	3
Electrical / Optical Characteristic (Ta=25 °C)	4
Absolute Maximum Rating	
Characteristic Curves	
Solder Profile & Footprint	9
Packing	
Labeling	
Ordering Information	
Revision History	12
Disclaimer	

Product: QBLP670_series	Date: March 09, 2015	Page 2 of 12
	Version# 3.3	



Introduction

Feature:

- Package in tape and reel
- Ultra bright reflector type PLCC2 LED
- InGaN technology for IB/IG/UV
- AlInGaP technology for R/AG/Y/O/S
- 120 degree viewing angle

Description:

These ultra bright reflector type PLCC2 LEDs have a height profile of 1.90mm. Combination of high brightness output and robust package, these LEDs are ideal for architecture lighting, status indication, and industrial equipment lighting applications.

Application:


- Status indication
- Industrial equipment backlighting
- Architecture lighting

Certification & Compliance:

- TS16949
- ISO9001
- RoHS Compliant



Dimension:

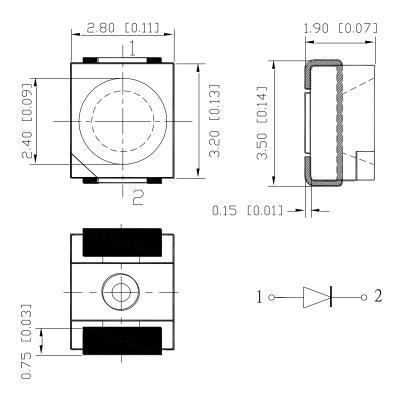

Units: mm / tolerance = ± -0.2 mm

Product: QBLP670_series	Date: March 09, 2015	Page 3 of 12
	Version# 3.3	



Electrical / Optical Characteristic (Ta=25 °C)

Product	Color	I _F (mA)	V _F	(V)	λ _D (nm)	/ λ _P (nm)) for UV	I _V (m	ncd)
Product	Color	IF (IIIA)	Тур.	Max.	Min.	Тур.	Max.	Min.	Тур.
QBLP670-IB	Blue	20	3.1	3.7	465	470	475	100	210
QBLP670-IG	True Green	20	3.1	3.7	520	525	530	500	900
QBLP670-UV	UV	20	3.2	3.7	400	405	410	80	125
QBLP670-R	Red	20	2.0	2.5	615	620	630	125	230
QBLP670-AG	Yellow Green	20	2.0	2.5	565	570	576	40	80
QBLP670-Y	Yellow	20	2.0	2.5	585	590	595	125	210
QBLP670-O	Orange	20	2.0	2.5	600	605	612	160	240
QBLP670-S	Deep Red	20	2.0	2.5	630	640	650	50	80

Absolute Maximum Rating

Material	P _d (mW)	I _F (mA)	I _{FP} (mA)*	V _R (V)	T _{OP} (°C)	T _{ST} (°C)	T _{SOL} (°C)**
InGaN (IB/IG/UV)	120	30	100	5	-40 ~ +85	-40 ~ +100	260
AllnGaP (R/AG/Y/O/S)	75	30	125	5	-40 ~ +85	-40 ~ +100	260

^{*}Duty 1/8 @ 1KHz

Forward Voltage V_F for AlInGaP @ I_F=20mA

Bin	Min.	Max.	Unit
	1.7	2.5	V

Forward Voltage V_F for InGaN @ I_F=20mA

Bin	Min.	Max.	Unit
f	2.8	3.1	
g	3.1	3.4	V
h	3.4	3.7	

Product: QBLP670_series	Date: March 09, 2015	Page 4 of 12
	Version# 3.3	

^{**}IR Reflow for no more than 10 sec @ 260 °C



Dominant Wavelength λ_D for Blue @ $I_F=20$ mA

	0 2	- ·	
Bin	Min.	Max.	Unit
G	465	467.5	
Н	467.5	470	nm.
I	470	472.5	nm
J	472.5	475	

Dominant Wavelength λ_D for Green @ I_F =20mA

Bin	Min.	Max.	Unit
U	520	522.5	
V	522.5	525	nm
W	525	527.5	nm
Χ	527.5	530	

Dominant Wavelength λ_D for Red @ I_F=20mA

Bin	Min.	Max.	Unit
S	615	620	
t	620	625	nm
u	625	630	

Dominant Wavelength λ_D for Yellow Green @ I_F=20mA

Bin	Min.	Max.	Unit
h	565	568	
i	568	572	nm
j	572	576	

Dominant Wavelength λ_D for Yellow @ I_F=20mA

Bin	Min.	Max.	Unit
m	585	590	nm
n	590	595	nm

Dominant Wavelength λ_D for Orange @ I_F =20mA

Bin	Min.	Max.	Unit
р	600	605	nm
q	605	610	nm

Dominant Wavelength λ_D for Deep Red @ I_F=20mA

Bin	Min.	Max.	Unit
V	630	635	22
W	635	650	nm

Product: QBLP670_series	Date: March 09, 2015	Page 5 of 12
	Version# 3.3	



Peak Wavelength λ_P for UV @ I_F =20mA

Bin	Min.	Max.	Unit
G	400	405	22
Н	405	410	nm


Luminous Intensity I_V @ I_F=20mA

Bin	Min.	Max.	Unit
F	40	50	
G	50	63	
Н	63	80	
I	80	100	
J	100	125	
K	125	160	
L	160	200	
M	200	250	mod
N	250	320	mcd
0	320	400	
Р	400	500	
Q	500	630	
R	630	800	
S	800	1000	
Т	1000	1250	
U	1250	1600	

Product: QBLP670_series	Date: March 09, 2015	Page 6 of 12
	Version# 3.3	




Characteristic Curves

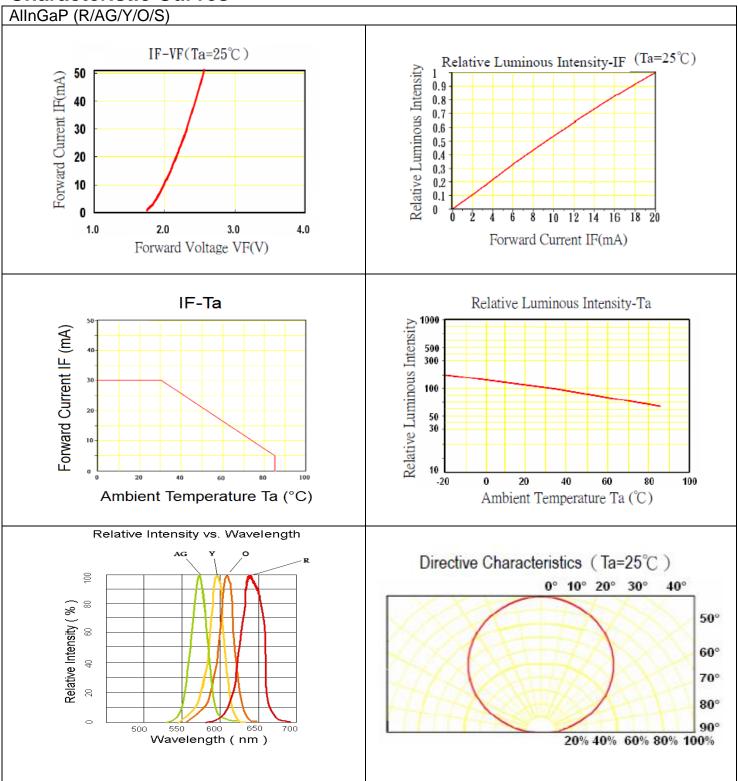

Product: QBLP670_series	Date: March 09, 2015	Page 7 of 12
	Version# 3.3	



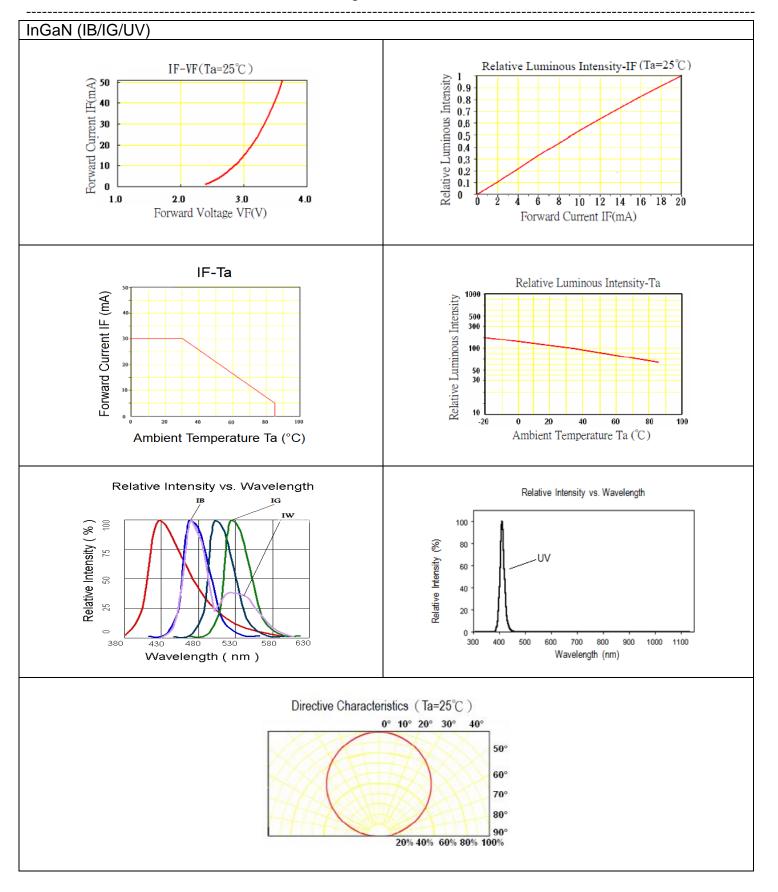



Product: QBLP670_series	Date: March 09, 2015	Page 8 of 12
	Version# 3.3	



Solder Profile & Footprint

- -Recommended tin solder specifications: melting temperature in the range of 178~192 °C
- -The recommended lead free reflow soldering profile is as follows (temperatures indicated are as measured on the surface of the LED resin):

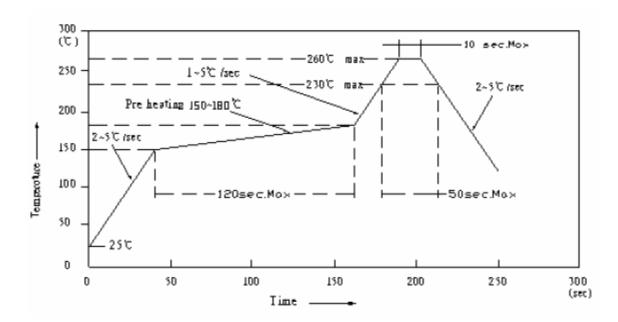

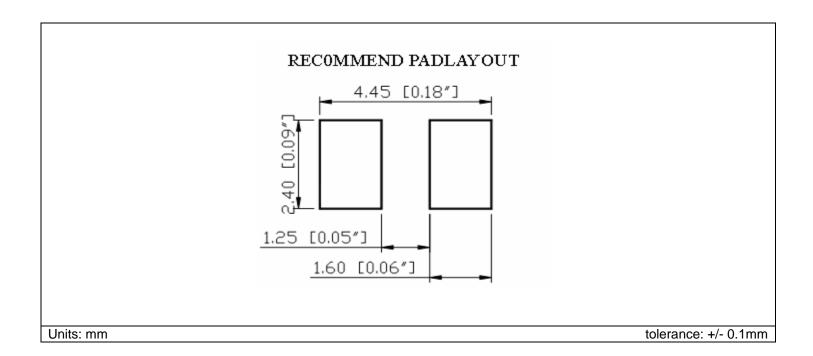


Product: QBLP670_series	Date: March 09, 2015	Page 9 of 12
	Version# 3.3	




Packing

Reel Dimension:

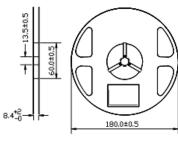


Unit: mm

Tape Dimension:

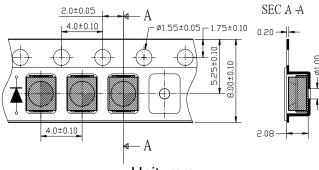


Unit: mm

Arrangement of Tape:

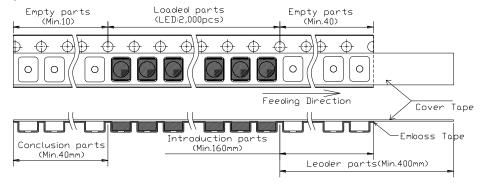

Packaging Specification:

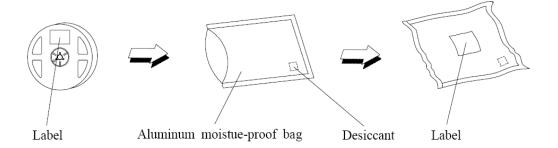

Product: QBLP670_series	Date: March 09, 2015	Page 10 of 12
	Version# 3.3	



Labeling

😥 QT-Brightek 😃				
Customer P/N:				
em:				
Q'ty:				
/f:				
/ :				
VI:				
oate:				
Made in China				

Ordering Information

Part #	Orderable Part #	Spec Range	Quantity per reel		
QBLP670-IB	QBLP670-IB	Iv=210mcd typ. @ 20mA/ λ _D =465nm to 475nm	2,000 units		
QBLP670-IG	QBLP670-IG	Iv=900mcd typ. @ 20mA/ λ _D =520nm to 530nm	2,000 units		
QBLP670-UV	QBLP670-UV	Iv=125mcd typ. @ 20mA/ λ _P =400nm to 410nm	2,000 units		
QBLP670-R	QBLP670-R	Iv=230mcd typ. @ 20mA/ λ _D =615nm to 630nm	2,000 units		
QBLP670-AG	QBLP670-AG	Iv=80mcd typ. @ 20mA/ λ _D = 565nm to 576nm	2,000 units		
QBLP670-Y	QBLP670-Y	Iv=210mcd typ. @ 20mA/ λ _D =585nm to 595nm	2,000 units		
QBLP670-O	QBLP670-O	Iv=240mcd typ. @ 20mA/ λ _D = 600nm to 612nm	2,000 units		
QBLP670-S	QBLP670-S	Iv=80mcd typ. @ 20mA/ λ_D =630nm to 650nm	2,000 units		

Product: QBLP670_series	Date: March 09, 2015	Page 11 of 12
	Version# 3.3	



Revision History

Description:	Revision #	Revision Date
New Release of QBLP670_series	V1.0	09/20/2010
Specification Updates	V2.0	02/03/2011
Amend specification	V2.1	06/01/2011
Green Brightness Updates	V2.2	07/19/2011
Specification Updates	V2.3	01/05/2012
Update Format	V2.4	03/19/2012
Spec updates/ label updates	V3.0	01/30/2013
Add Deep Red Wavelength Bin	V3.1	09/30/2013
Update and add bin info for UV / Update orange min. brightness	V3.2	02/09/2015
Update operating and storage temperature	V3.3	03/09/2016

Disclaimer

QT-BRIGHTEK reserves the right to make changes without further notice to any products herein to improve reliability, function or design. QT-BRIGHTEK does not assume any liability arising out of the application or use of any product or circuit described herein; neither does it convey any license under its patent rights, nor the rights of others.

Life Support Policy

QT-BRIGHTEK's products are not authorized for use as critical components in life support devices or systems without the express written approval of QT-BRIGHTEK. As used herein:

- 1. Life support devices or systems are devices or systems which, (a) are intended for surgical implant into the body, or (b) support or sustain life, and (c) whose failure to perform when properly used in accordance with instructions for use provided in the labeling, can be reasonably expected to result in a significant injury of the user.
- 2. A critical component in any component of a life support device or system whose failure to perform can be reasonably expected to cause the failure of the life support device or system, or to affect its safety or effectiveness.

Product: QBLP670_series	Date: March 09, 2015	Page 12 of 12
	Version# 3.3	